

5007R and 5007R6 turn signal switch operates on 12 volts or 6 volts pos / neg grounds.

The only difference in wiring positive ground the polarity on the diagram is simply reversed all wired the same way. The switch comes from the factory with 12 volt indicator light, switching to 6 volts, simply change the indicator bulb to 6 volts and everything else will work the same. **The switch itself does not care if 6 or 12 volts all works the same.**

5007R TURN SIGNAL SWITCH

WIRING DIAGRAM

