


# BKT216302

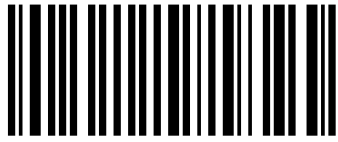

# VINTAGE

== *Auto Garage* ==



Fits:

1939-54 GMC Truck 228, 236, 248, 256, 270, 302 6 cylinder engines

1937-1955 Chevrolet First series 216, 235, 261 6 cylinder engines

Buick Straight 8 cylinder engines

Pontiac 261 engine (used in full size Pontiac made in Canada)

Remove the old generator and generator mount from the engine. Install the bracket with the hardware provided.

Install the alternator to the bracket with the hardware provided. Note: The rear hole of the alternator bracket is enlarged to allow the bolt to align properly.

Reinstall the fan belt and tighten by swinging the alternator within the bracket-integrated belt tension slot. The belt should be tight enough that it does not slip.

Bracket Includes:

BOLT 5/16-18 x 1	1
BOLT M8 x 1.25 x 25mm	1
BOLT 3/8-16 x 1	2
BOLT 3/8-24 x 3	1
USS FLAT WASHER 5/16"	1
SPLIT LOCK WASHER 5/16"	2
SPLIT LOCK WASHER 3/8"	3

