


BKT5053-243

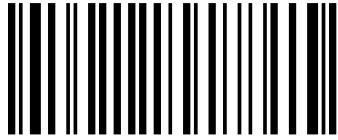

VINTAGE

== Auto Garage ==



Ford Mercury Flathead Alternator Mount used with 3/8" narrow belt/pulley applications.

Install the alternator to the front of the bracket using the 1 3/8" spacer on the opposite side of the alternator boss to take up the difference. Use the hardware provided with the bracket. The fan bracket mounts to the front of the bracket using the exciting bolts to fasten. Slide the bracket up to tighten the belt. It should be tight enough so the belt does not slip on the alternator pulley.

Belts: Use a belt length of 53" for the alternator drive belt (NAPA part# 13333), and a fan belt length of 42 1/2" (NAPA part# 7417). These lengths may vary depending on your pulley diameters and application.

