

Part number: GS1


Alternators require the frame to be well grounded. The alternator bracket that holds the alternator to the engine does not always provide a good ground.

To prevent damage to the internal regulator, it is essential to install a ground strap 10 AWG or larger from the rear of the alternator to the engine block or chassis.

Connect Ground Strap Here

Vintage Auto Garage

800-516-4461

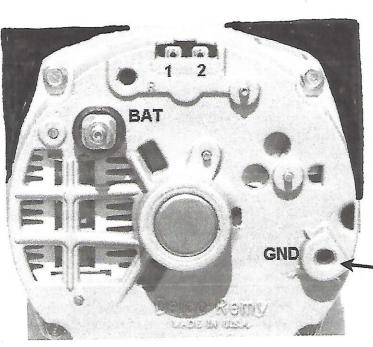

Part number: GS1

Alternators require the frame to be well grounded. The alternator bracket that holds the alternator to the engine does not always provide a good ground.

To prevent damage to the internal regulator, it is essential to install a ground strap 10 AWG or larger from the rear of the alternator to the engine block or chassis.

Connect Ground Strap Here